


User's Manual

6-ZONE GOOSENECK MICROPHONE

MODEL: RM6

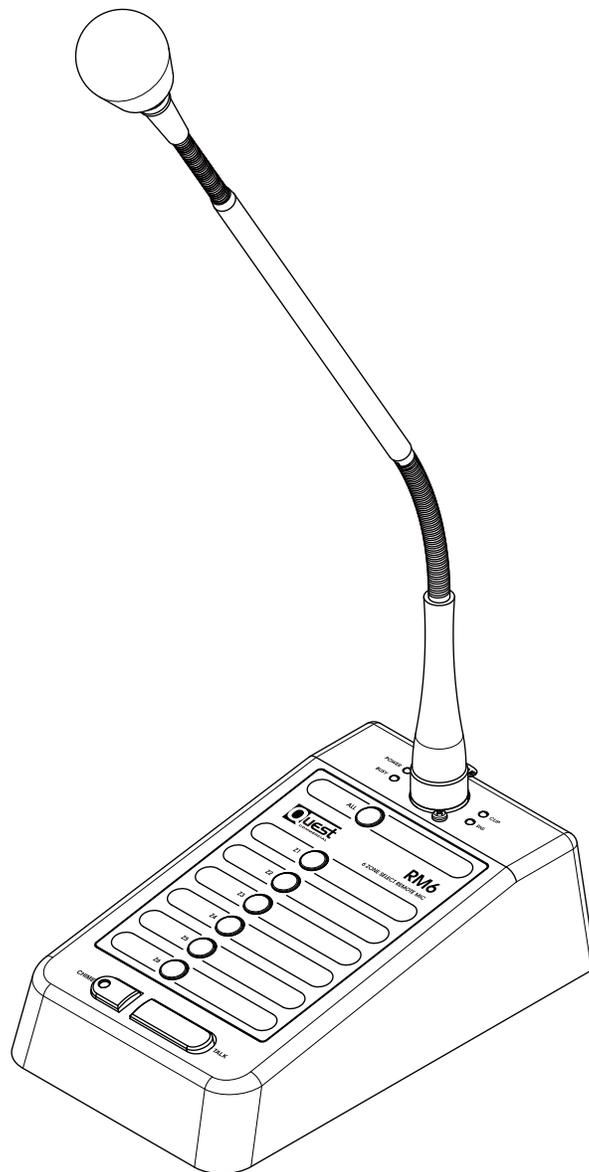

Specifications are subject to change without notice



Front Panel



- **Indicators**
Power (Blue), Signal (Green), Clip (Red), Busy (Red)
- **MIC Input**
XLR input Jack to Connect a condenser microphone
- **ALL**
Select and release all zones. Press and hold for locking all zones
- **Z1 to Z6 – Individual Zone Selection**
Select and release each zone 1 – 6
Press and hold for locking the selected zone
- **CHIME**
Turn ON and OFF the preannouncement chime
- **TALK**
Press and hold to start broadcasting after selecting the zone(s)
Release the button to end broadcasting

Rear Panel



- LINK**
 Terminals to connect to the PR-Series mixer-amplifier with UTP CAT5/6
 We recommend a total distance of up to 200m between the microphone and the mixer-amplifier. Up to 4 RM6 can be connected through the LINK port
- CHIME volume**
 Adjust preannouncement chime volume
- MIC volume**
 Adjust microphone level

Performance	
Audio Output	0dB (Balanced)
Audio Input	- 36 dB ±3 dB (Balanced)
Frequency Response	80Hz~15kHz (-1 dB)
Signal to Noise Ratio	Better than 90dB
Total Harmonic Distortion (T.H.D.)	Less than 0.5%
Serial Interface	RS485 Max 200m (UTP CAT5/6)
Operating Temperature	0° ~ +40°C
Construction	
Net Weight	0.5 kg
Carton Dimensions (Width/Height/Depth)	7.9(W) x 2.4(H) x 4.7(D) inches 200(W) x 60(H) x 120(D) mm



21000 Transcanadienne
Baie d'Urfé, Québec, H9X 4B7
Phone: 1-877-374-5266
Fax: 888-918-2244

www.eriksoncommercial.com

Copyright © 2022 Exertis | Jam. All rights reserved